




## PCA-1100 ou PCA-1110 TAMBOURS CABESTANS

**Inclus : 1 x tambour, 1 x guide corde, 2 x boulons en acier inoxydable ¼-20 x ¾"**

Suivez les instructions suivantes pour l'installer. Tous les boulons requièrent la clé hexagonale 4 mm (5/32") incluse avec votre treuil.

- 1) Enlevez le guide corde (figure 1);
- 2) Enlevez le boulon au bout de l'axe du tambour (figure 2);
- 3) Retirez le tambour de l'axe (figure 3). Au besoin, pressez derrière à l'aide de deux tournevis;
- 4) Remplacez-le par le nouveau tambour (figure 4). La clé de blocage doit demeurer en position. Installez boulon et rondelle.
- 5) Installez le guide corde (inclus avec le tambour) en insérant les boulons dans les trous prévus à cette fin (figure 5).

**Note : Assurez-vous que le guide corde ne touche pas au tambour.**

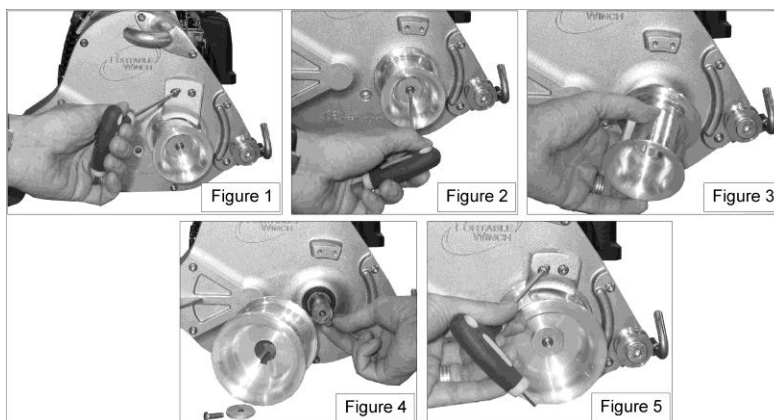


## PCA-1100 ou PCA-1110 TAMBOURS CABESTANS

**Inclus : 1 x tambour, 1 x guide corde, 2 x boulons en acier inoxydable ¼-20 x ¾"**

Suivez les instructions suivantes pour l'installer. Tous les boulons requièrent la clé hexagonale 4 mm (5/32") incluse avec votre treuil.

- 1) Enlevez le guide corde (figure 1);
- 2) Enlevez le boulon au bout de l'axe du tambour (figure 2);
- 3) Retirez le tambour de l'axe (figure 3). Au besoin, pressez derrière à l'aide de deux tournevis;
- 4) Remplacez-le par le nouveau tambour (figure 4). La clé de blocage doit demeurer en position. Installez boulon et rondelle.
- 5) Installez le guide corde (inclus avec le tambour) en insérant les boulons dans les trous prévus à cette fin (figure 5).

**Note : Assurez-vous que le guide corde ne touche pas au tambour.**

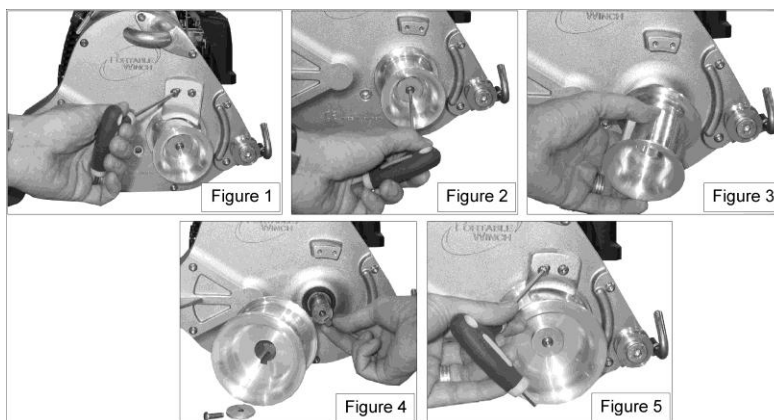




## PCA-1100 or PCA-1110 CAPSTANS DRUMS

**Includes:** 1 x drum, 1 x rope guide, 2 x stainless steel bolts 1/4"-20 x 3/4"

Please follow these simple installation steps. All bots require a 4 mm (5/32") hex wrench, included with your winch manual.

- 1) Remove the rope guide (figure 1)
- 2) Remove the bolt located at the end of the drum axle (figure 2);
- 3) Remove the drum from the axle (figure 3). If necessary, you may push it forward with two screwdrivers;
- 4) Replace it with the new drum (figure 4). Make sure that the shaft key stays in place. Install bolt and washer;
- 5) Install the rope guide (included with the drum) using the two (2) bolts (figure 5).

**Note:** Make sure that the rope guide is not in contact with the capstan drum.

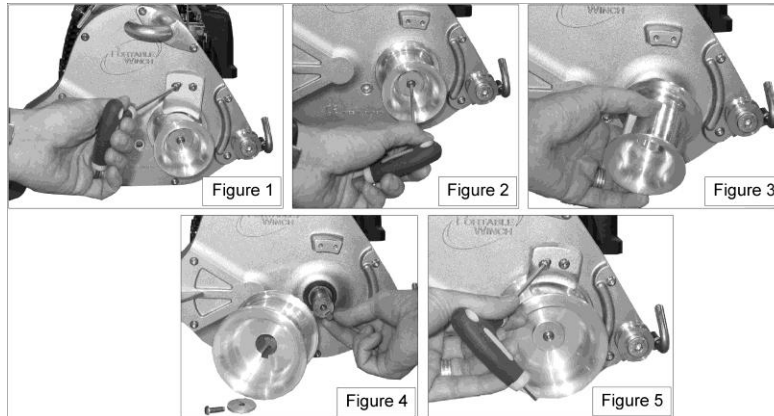

## PCA-1100 or PCA-1110 CAPSTANS DRUMS

**Includes:** 1 x drum, 1 x rope guide, 2 x stainless steel bolts 1/4"-20 x 3/4"

Please follow these simple installation steps. All bots require a 4 mm (5/32") hex wrench, included with your winch manual.

- 1) Remove the rope guide (figure 1)
- 2) Remove the bolt located at the end of the drum axle (figure 2);
- 3) Remove the drum from the axle (figure 3). If necessary, you may push it forward with two screwdrivers;
- 4) Replace it with the new drum (figure 4). Make sure that the shaft key stays in place. Install bolt and washer;
- 5) Install the rope guide (included with the drum) using the two (2) bolts (figure 5).

**Note:** Make sure that the rope guide is not in contact with the capstan drum.

